

10. Spare Parts Catalogue C057

10. 1. Parts List C057

Item	Description	Part- No.	Quantity
1	Base plate	T. 1	1
2	Side plate	T. 2	1x left, 1x right
3	Mounting block (Rear)	T. 3	1
4	Cutting blade drive block	T. 4	1
5	Mounting block (Front)	T. 5	1
7*	Cutting plate	T. 7	1
8*	Cutting blade complete	T. 8 + T. 6	1
9	Plate	T. 9	1
10	Machine cover	T.10	1
11	Scrap tray	T.11	1
12*	Bushing	T.12	1
14	Coupling block	T.14	1
15*	Spacer plate (Option)	T.15	1
20*	Cylinder DSW 32-118		1
21*	Felt oil pad		3
22*	Bushing N-12 L V		1
23	Shaft Ø12h6 x 210, hardened		2
24*	Spring Best.- No. 46-2-3		1
25*	Spring Best.- No. 44-3-3		2
26	Rubber foot		4
27	Tube		1
	Foot valve F 5 ¼ B		1
30	Fitting for the shaft	C057 P T.30	4
31	Guide in front	C057 P T.31	2
32	Guide rear	C057 P T.32	2
33	Cutting length adjusting plate	C057 P T.33	1
34	Guiding rail left	C057 P T.34	1
35	Guiding rail right	C057 P T.35	1
36	Guiding rail rear	C057 P T.36	1
37	Holder micrometer screw	C057 P T.37	2
38	Shaft 6x60	C057 P T.38	4
39	Micrometer screw 0-25mm	C057 P T.39	2

*Spare Parts are marked with **

10. 2 Illustrated parts Breakdown C057

